

 
 

 


 



- Ⓛ Montageanleitung
- Ⓒ Assembly Instructions
- Ⓧ Instructions de montage
- ⓔ Instrucciones de montaje
- Ⓜ Istruzioni per il montaggio
- Ⓝ Montage-instructie


- Ⓟ Instruções de montagem
- Ⓝ Montagevejledning
- Ⓢ Monteringsanvisning
- Ⓟ Instrukcja montażu
- Ⓜ Οδηγία μοντάζ
- Ⓝ Návod k montáži

- Ⓛ Navodilo za montažo
- Ⓢ Návod na montáž
- Ⓜ Szerelési útmutató
- Ⓜ Инструкция по монтажу
- Ⓜ Montaj kılavuzu

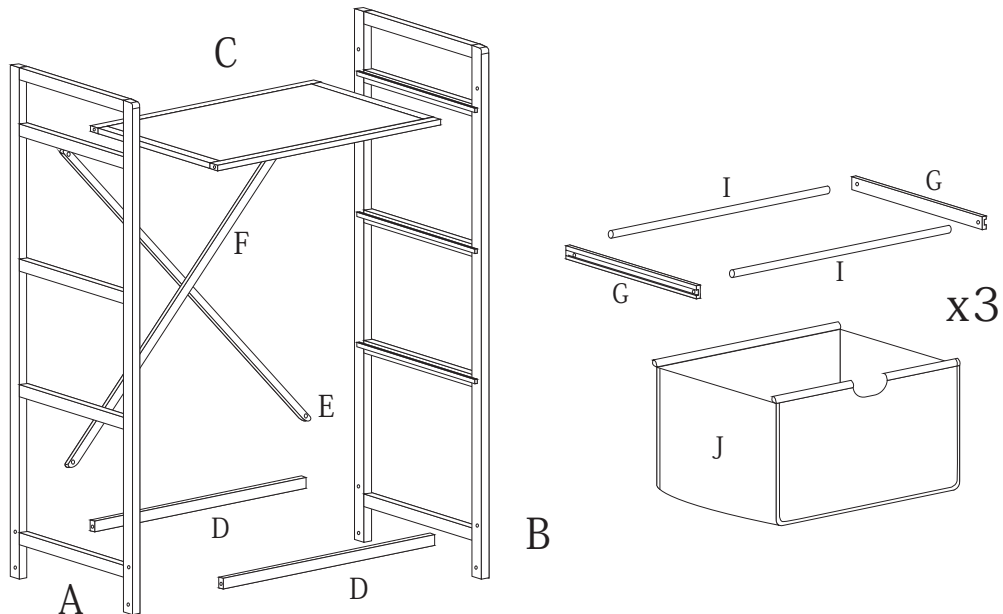


 ax20	 fx4	
 bx1	 gx4	
 cx4		
 dx2		
 ex2		

1

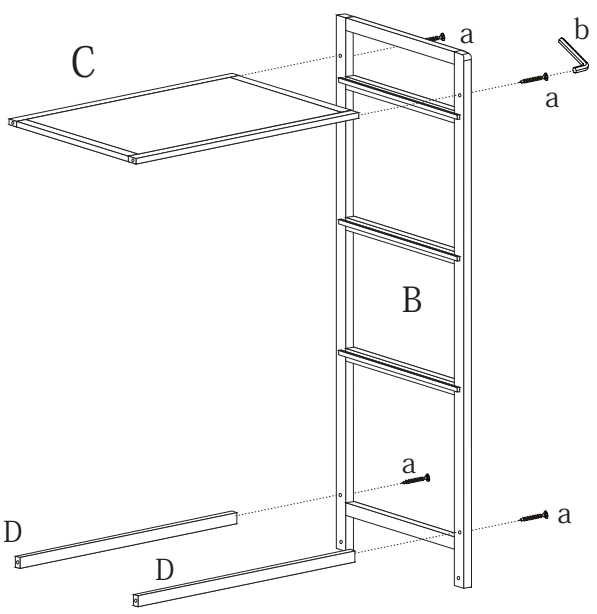

2

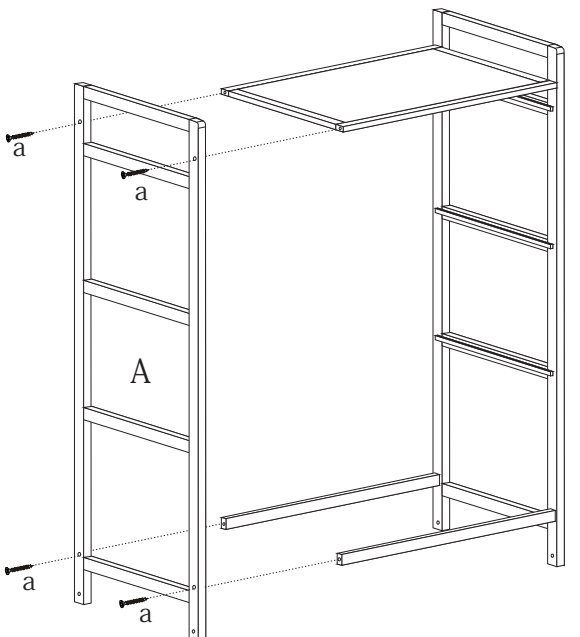

© WENKO® 22.12.2017 62213100









- DE Montageanleitung
- GB Assembly Instructions
- FR Instructions de montage
- ES Instrucciones de montaje
- IT Istruzioni per il montaggio
- NL Montage-instructie

- PT Instruções de montagem
- DK Montagevejledning
- S Monteringsanvisning
- PL Instrukcja montażu
- GR Οδηγία μόντάζ
- CZ Návod k montáži

- SI Navodilo za montažo
- SK Návod na montáž
- H Szerelési útmutató
- RU Инструкция по монтажу
- TR Montaj kılavuzu

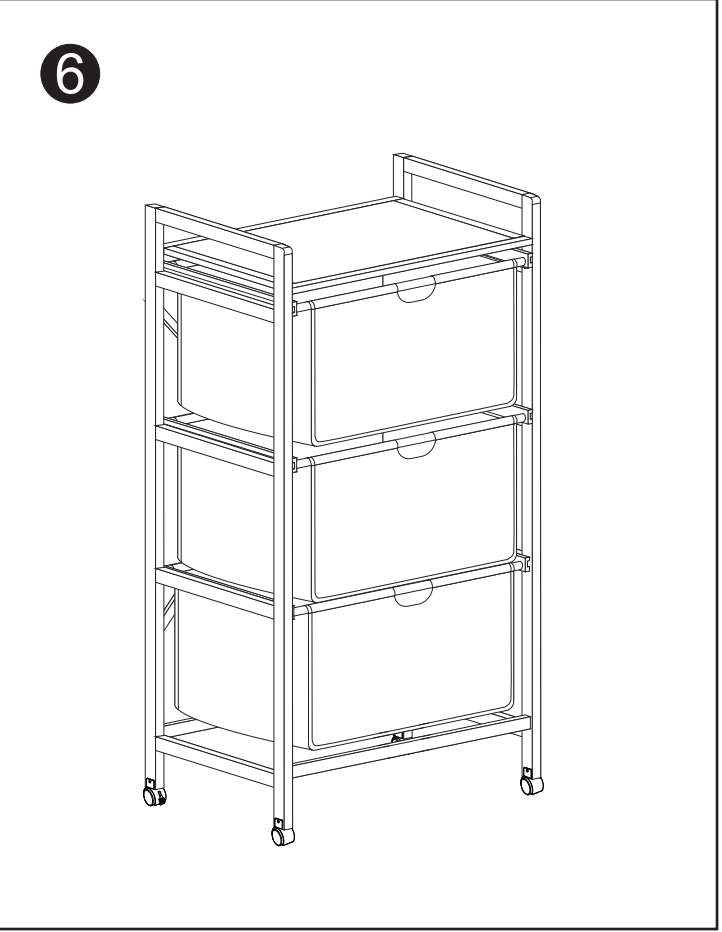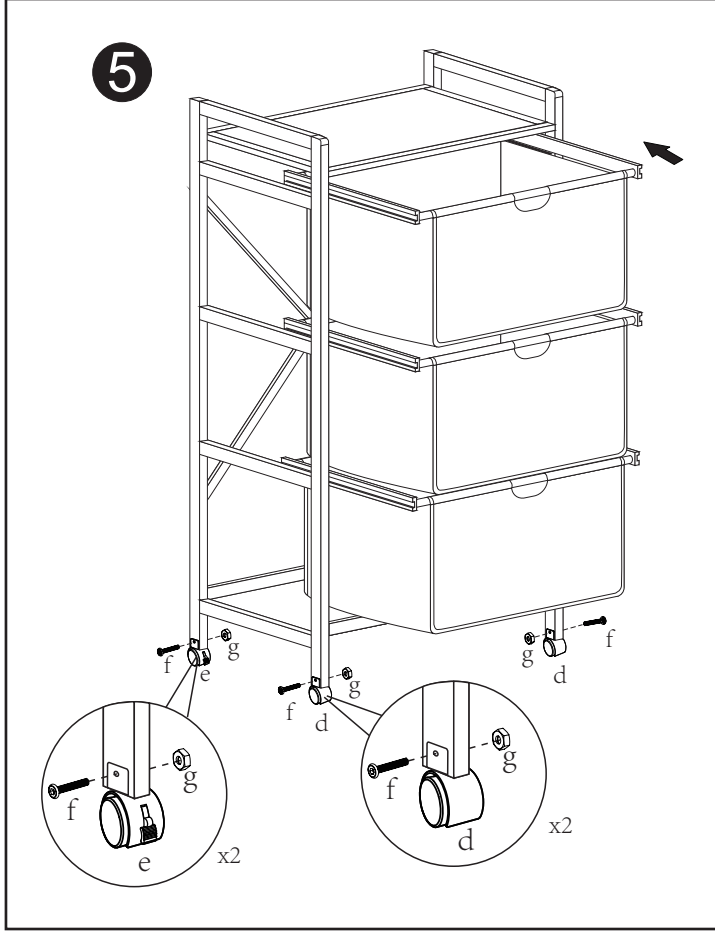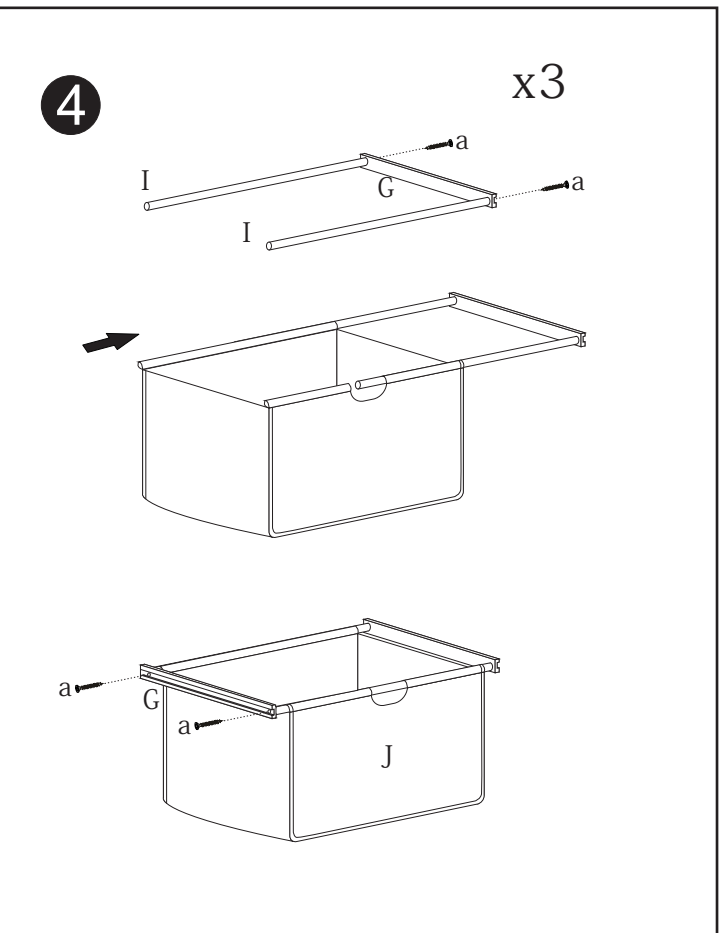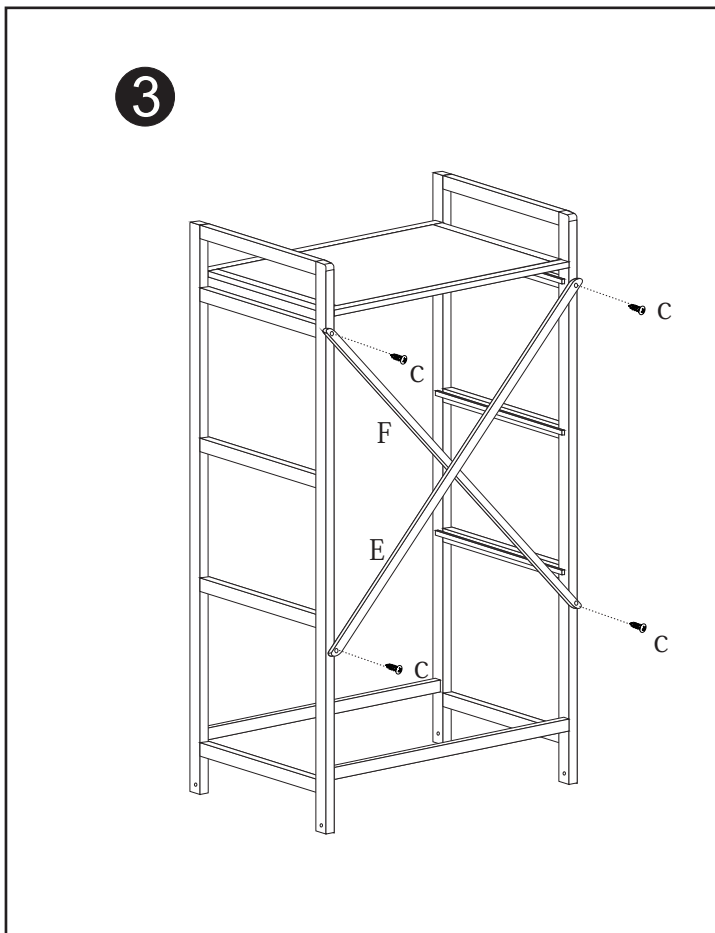

© WENKO® 22.12.2017 62213100

