

PARTS AND HARDWARE

Avoid using sharp objects such as a knife to cut open packing as you may accidentally damage the upholstery.









C:1PC

D:1PC

F:1PC

G:1PC



M6*20





Do not fully tighten bolts until assembly is complete. Assemble the sofa leg(D) to the seat(C),using bolt and washer(N).



